

# YACHT PILOT



## YachtPilot App Guide



SAFE • SECURE • SMART




# Contents

Getting Started: Account Registration .....	3
Account Registration (Continued) .....	4
Add a Boat .....	5
Edit Boat Details.....	6
Set-up YachtPilot Sensor .....	7
Sensor Settings.....	8
Settings.....	9
The Home Screen .....	10
Alerts.....	11
Alert Filtering and Marking All .....	12
Anchor Alarm .....	13

# Getting Started: Account Registration

1. If you already have a login, open the YachtPilot App and log in with your email and password.




2. If you do not already have a login, tap **Register**. Next, create an account with your email and set a strong password, then tap **Register**.

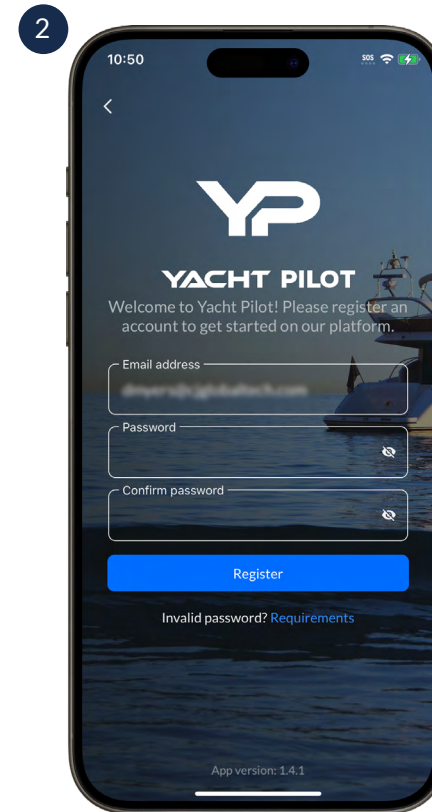

# Account Registration (Continued)



3. You will need to verify your email address by clicking the **Verify account** button in the email sent by YachtPilot.

4. Once verified, you will be able to log in.

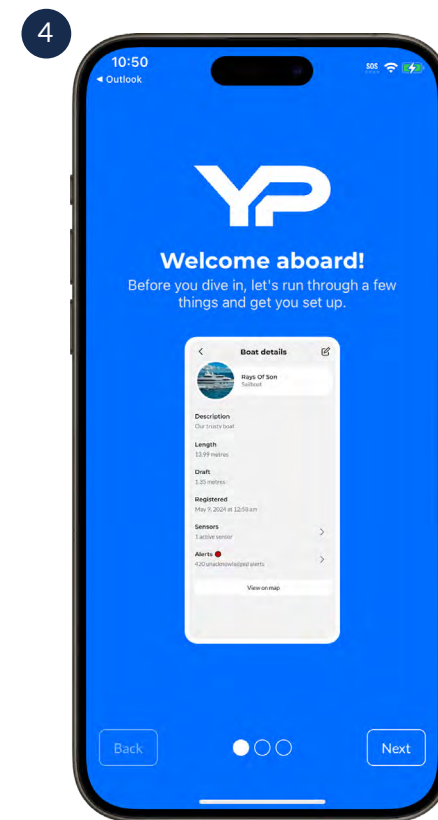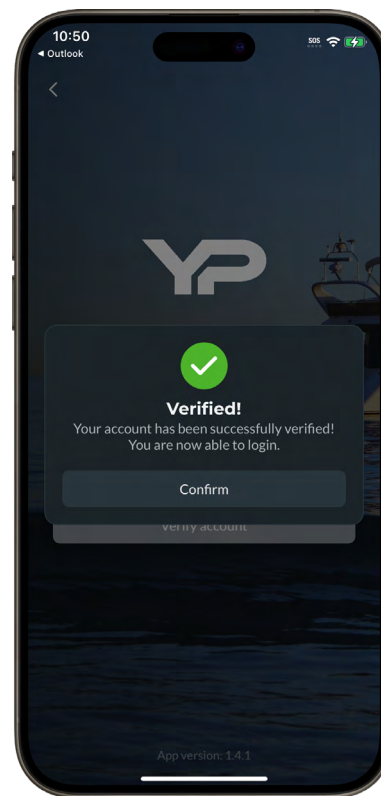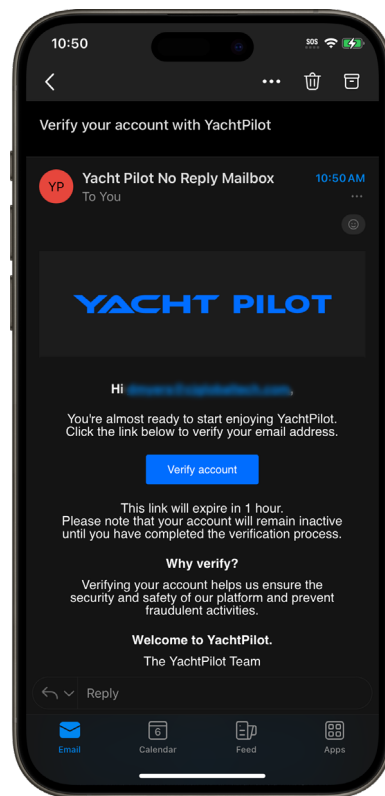


# Add a Boat


1. Tap the + in the upper right corner of the **Boats** screen.
2. Enter some basic information about your boat, such as its name and type of boat, then tap **Register**.

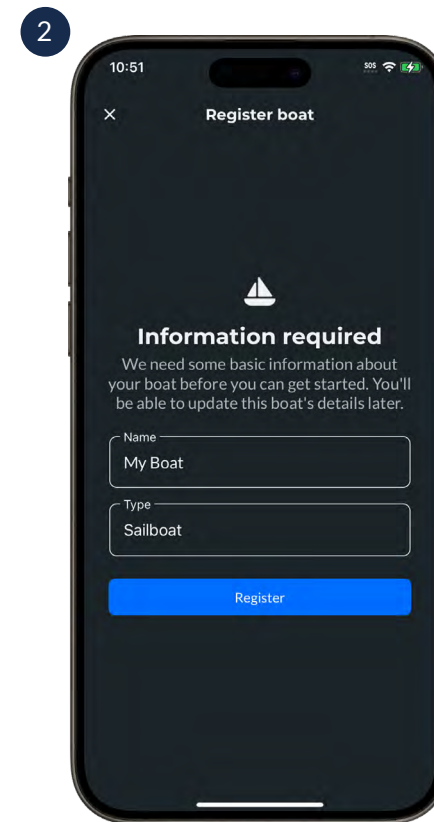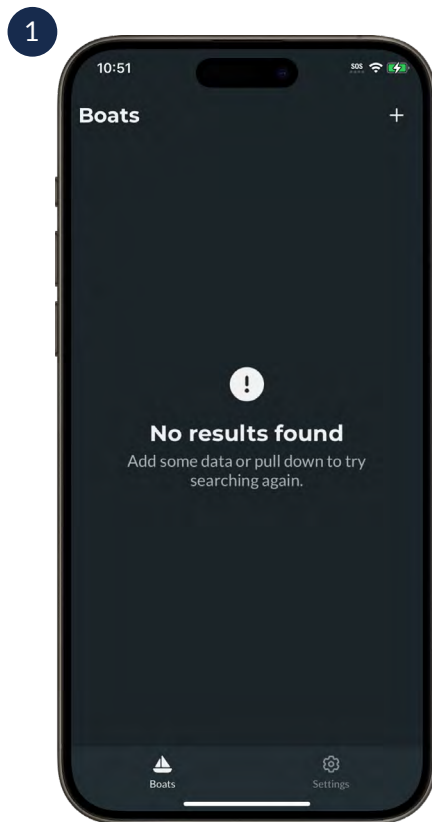

# Edit Boat Details

 3. Now you have registered a boat.  
Suppose you have more than one, you can continue to add more. However, only one boat may be registered with a particular Sensor.  
Multiple boats will require multiple Sensors.

4. Tap the  to add any optional information.  
This information will give you a more personalised experience in the app and, with more features added over time, you will enjoy further enhancements to your overall experience.



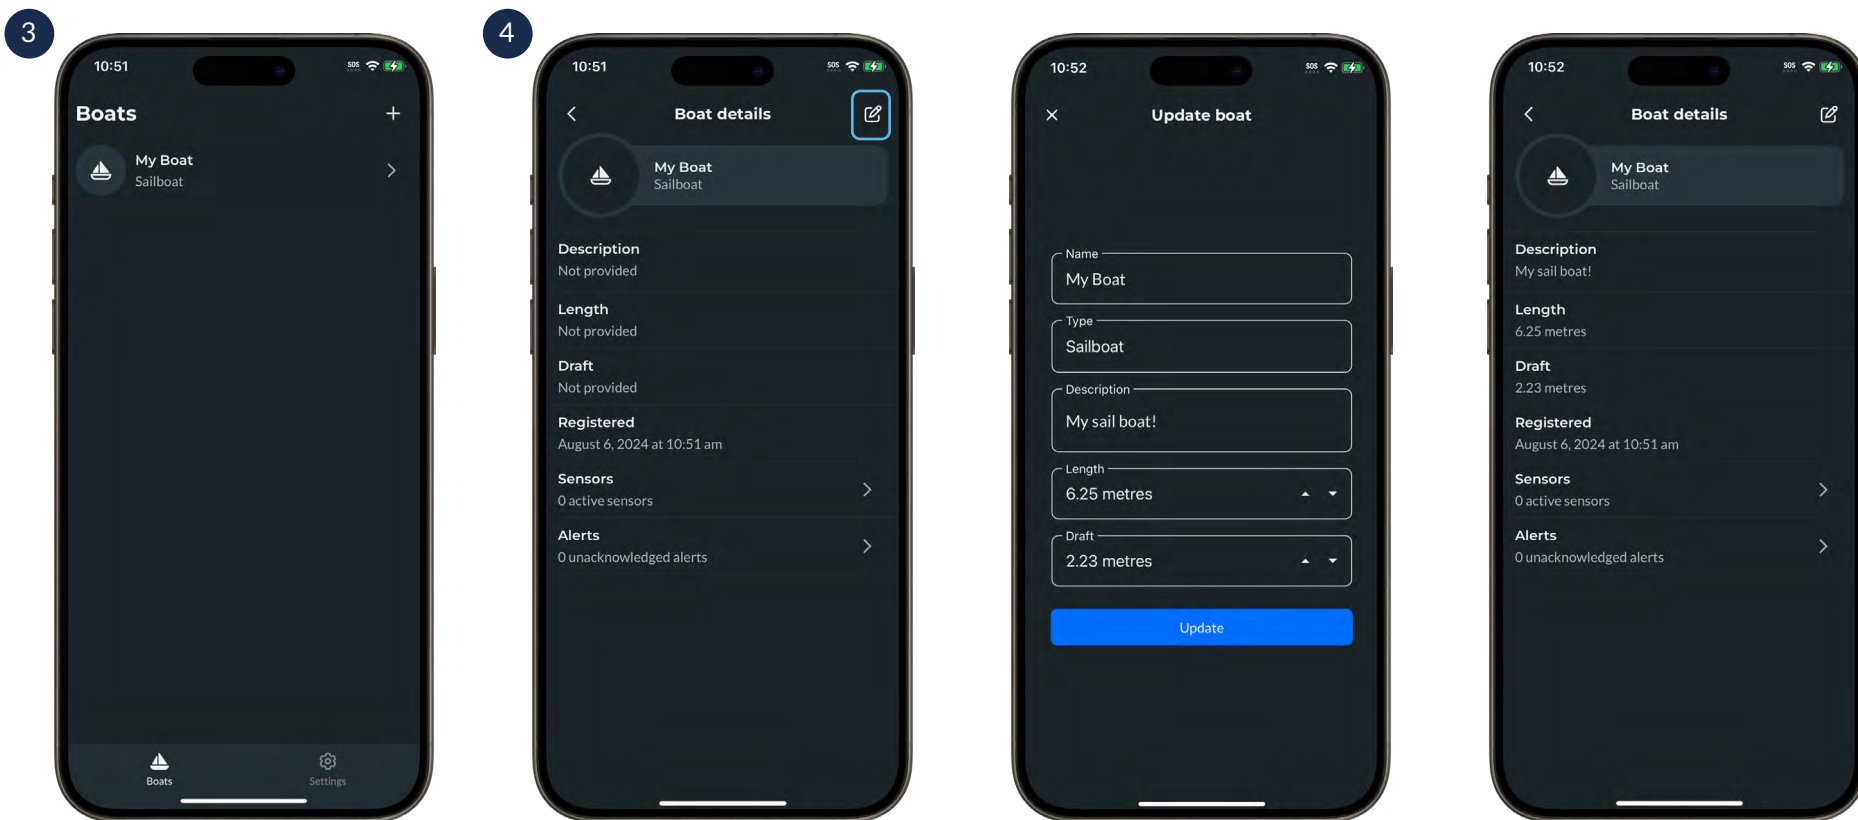


# Set-up YachtPilot Sensor



Before you begin, ensure your mobile device has Bluetooth and local network access permissions enabled, and is connected to the same network as the Sensor.



1. Tap the > to the right of **Sensors** in the list.
2. On the **Boat sensors** screen, tap the + .
3. Allow permissions and follow the prompts.
4. Connect to Wi-Fi network.

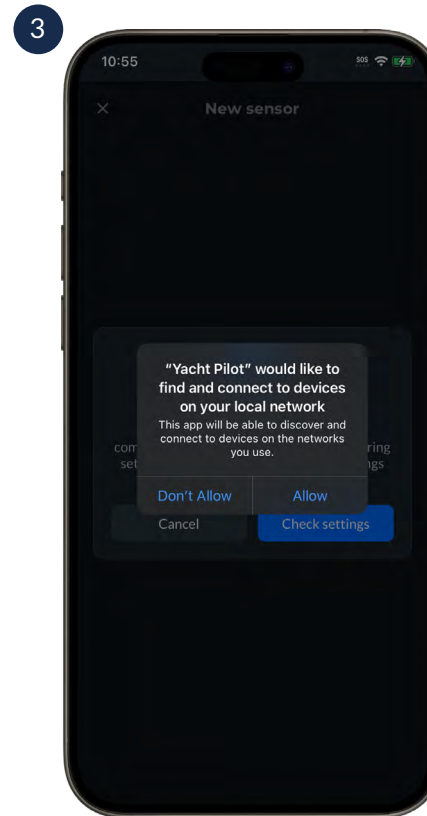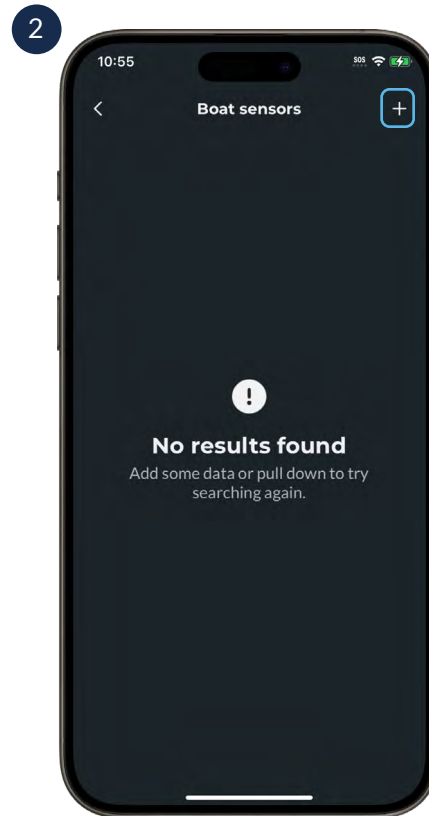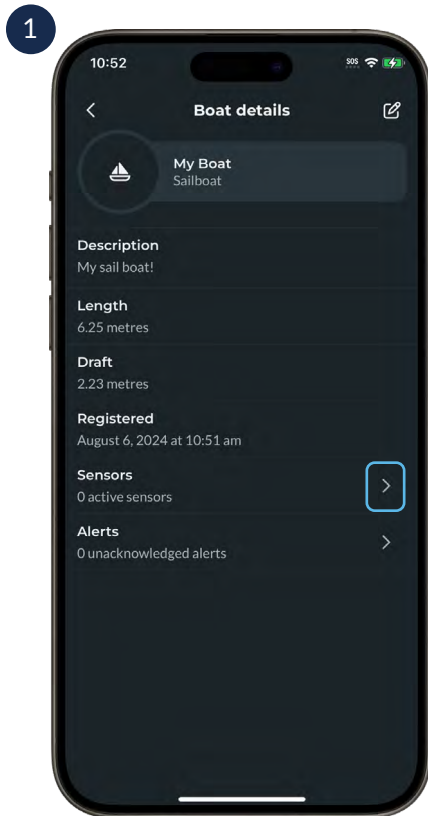


# Sensor Settings

Only after the Sensor is paired to your mobile device, will you see your Sensor's identification number. It will be unique to your pairing.

1. Tap the > to **Sensor details** screen where you will find the hardware's serial number.

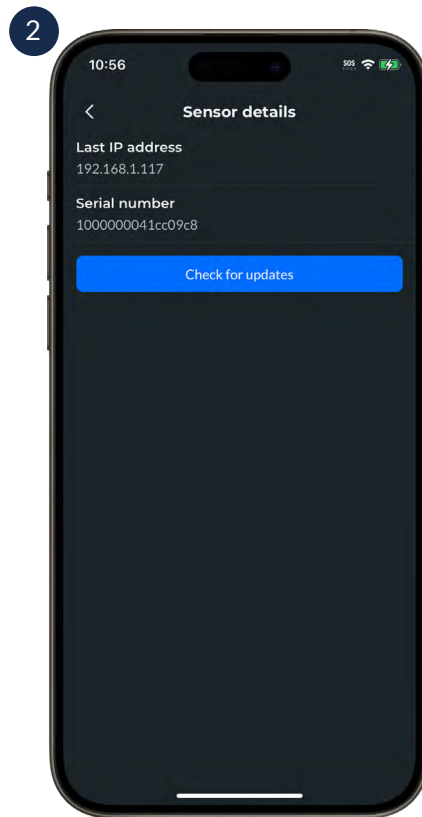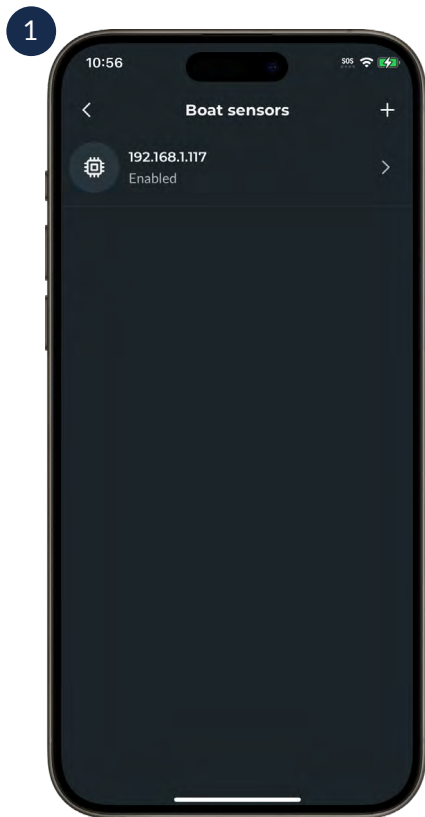


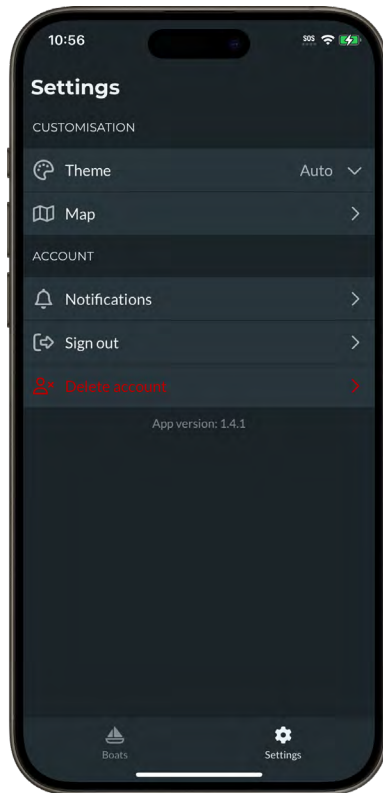
2. Tap the < to return to the **Boat details** screen.
3. Following set-up you will see a new list item: **View on map**, tap that button which will take you to a map view of your boat's location.

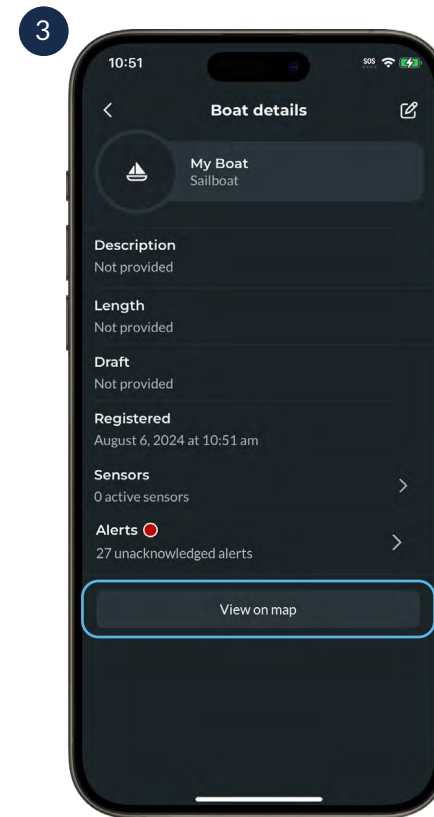




# Settings

Enter the **Settings** menu by tapping the  tab on the bottom navigation bar.




The **Settings** menu gives you the ability to set your preferences, control alerts, notification permissions as well change your **Home** screen view.

Simply toggle **Show map on app start**. You can then set which widgets you wish to display on your new home screen.

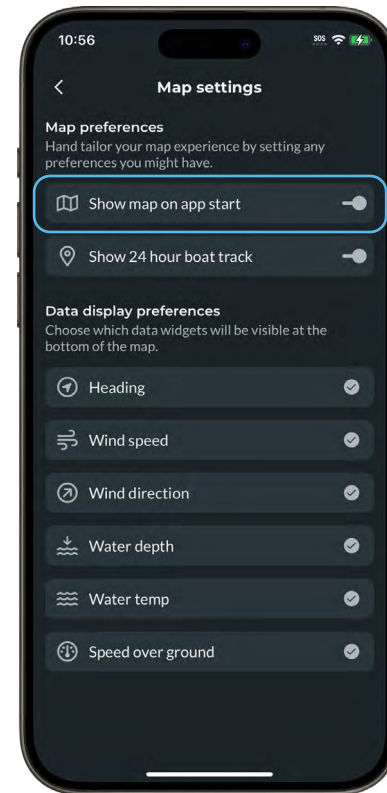

# The Home Screen

Show map on start-up sets your new **Home** screen to look like this. With all of your boat's information in a simple and intuitive interface.

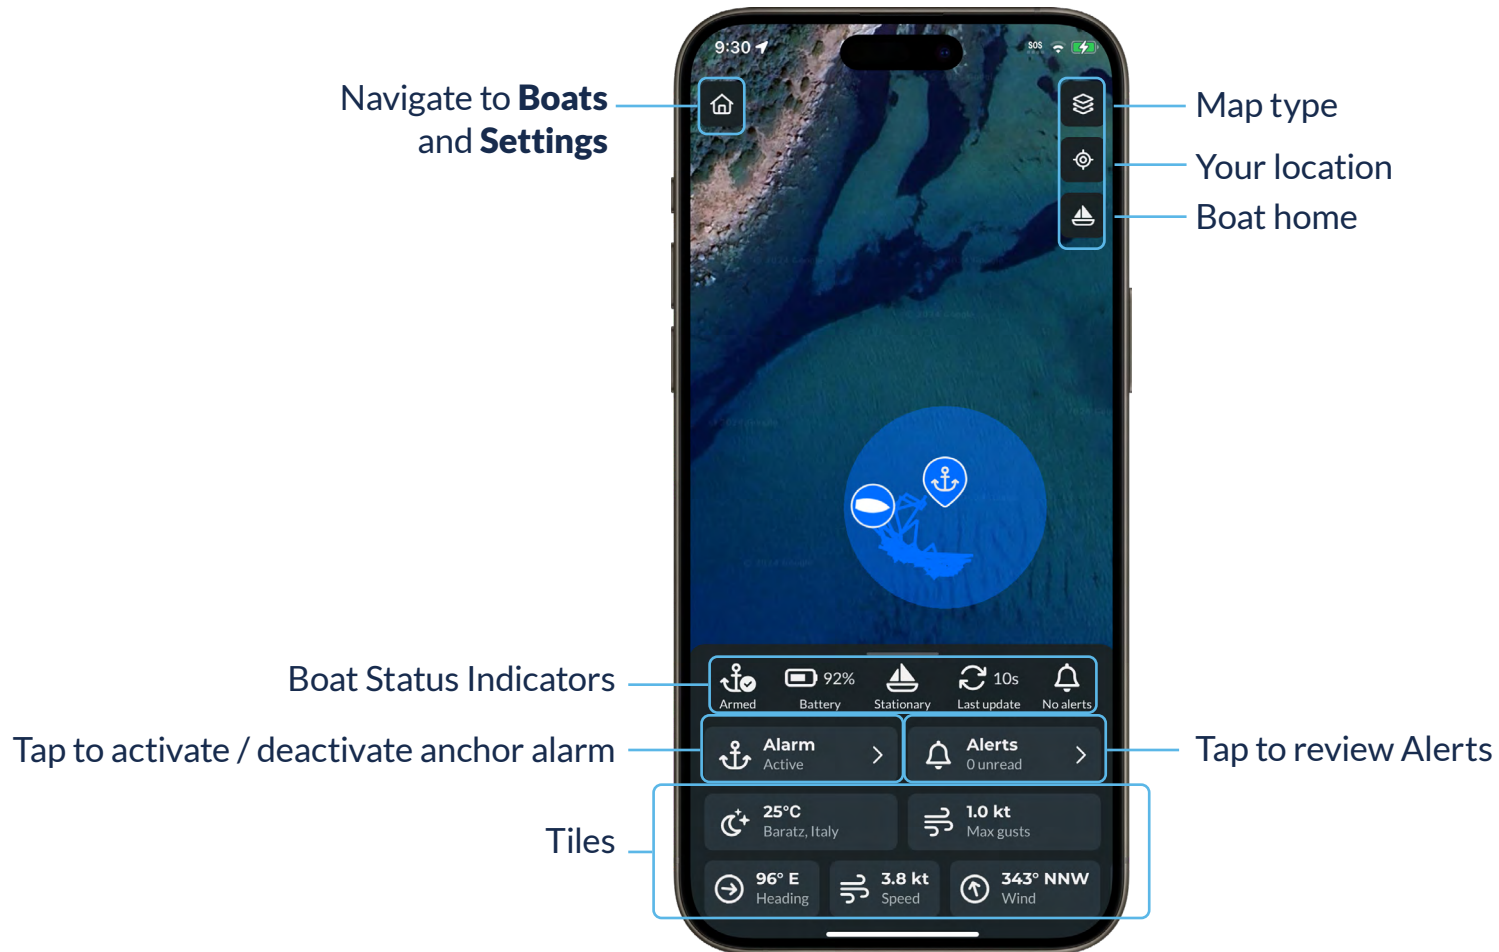




# Alerts

The **Alerts** screen can be accessed by tapping the **Alerts** tile on the **Home** screen or from the **Boat details** screen.

1. The Alerts screen lists all alerts from every instrument being monitored by your YachtPilot Sensor. Tapping the > will direct you to the **Alert detail** screen.


2. Every alert will display the date, timestamp and brief description of the event.

3. Tap the ✓ to acknowledge the alert.

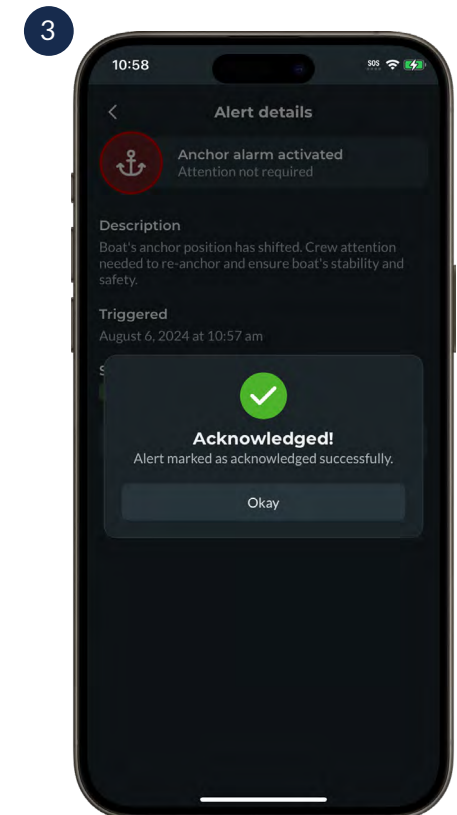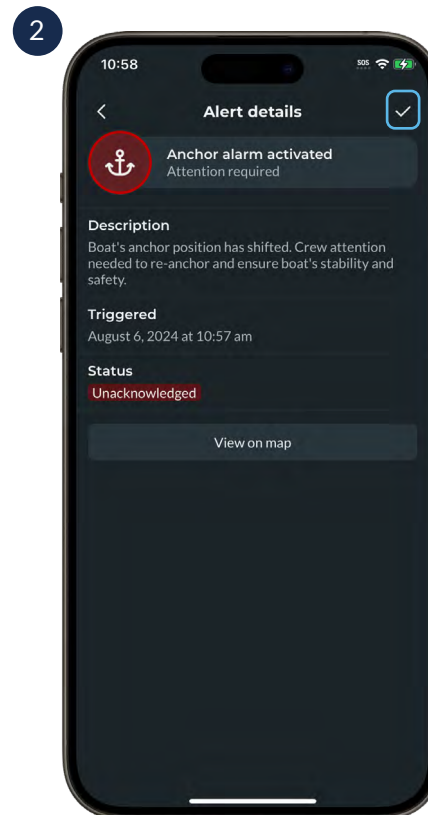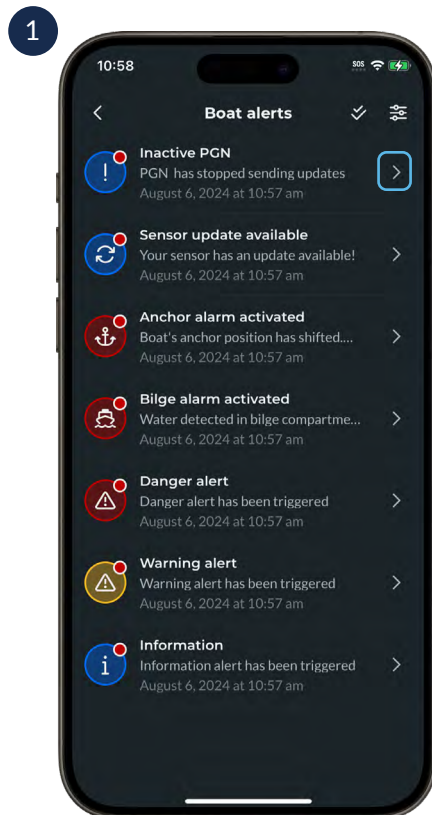




# Alert Filtering and Marking All

Efficiently manage your notifications by **filtering** specific alerts and using **Mark All** to clear or address multiple alerts at once, ensuring you stay organised and focused on what's important.

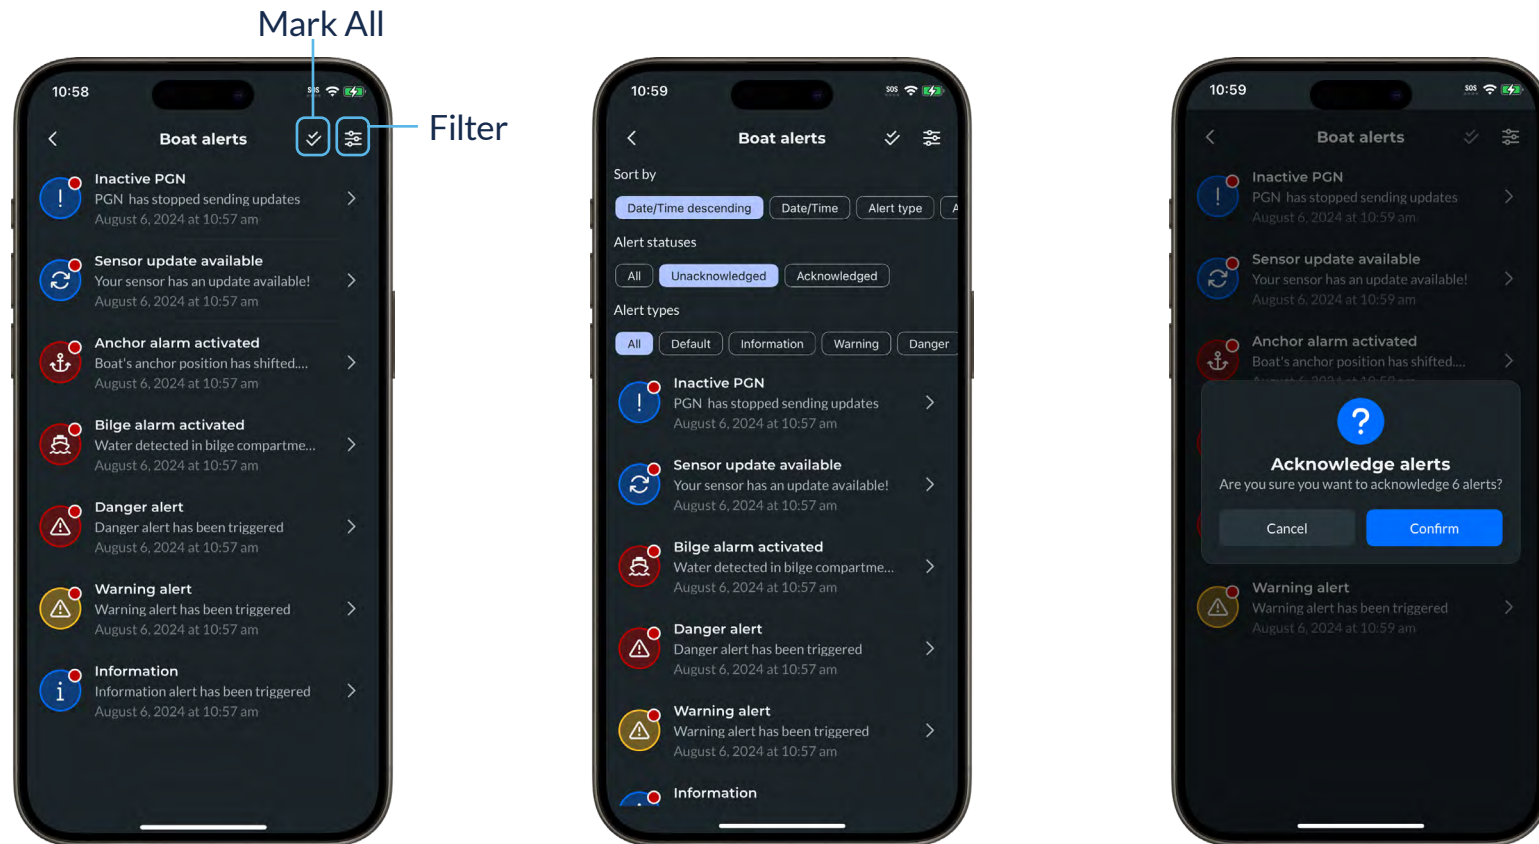

# Anchor Alarm

Set customisable alerts to notify you if your boat drifts beyond a specified range, helping ensure your vessel remains securely anchored and preventing unwanted movement. Tap the **Alarm** tile on the home screen to set/ deactivate anchor alarm.

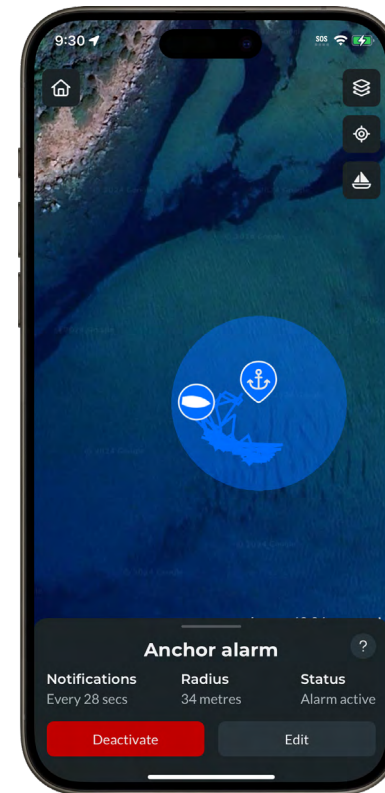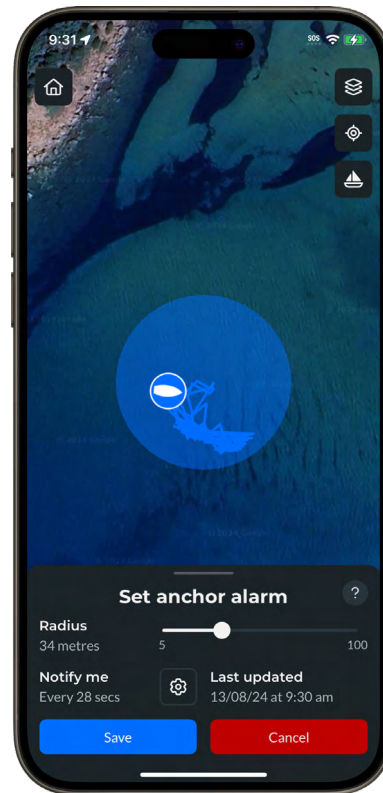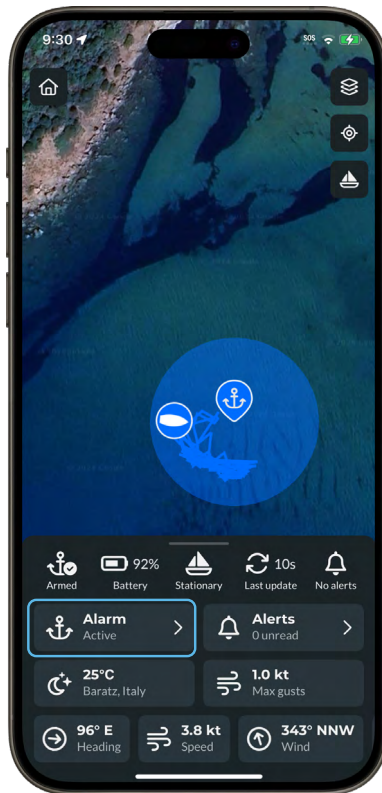



# YACHT PILOT

SAFE • SECURE • SMART

+61 02 9160 7045

[support@yachtpilot.co](mailto:support@yachtpilot.co)

[yachtpilot.co](http://yachtpilot.co)